




MONTAGGIO CERNIERE TELAIO **HINGE FRAME ASSEMBLY**

3303AXX	
3304AXX inf. sx/sup dx	
3304AXX inf. dx/sup sx	

Posizione iniziale delle camme
Correct starting cam position

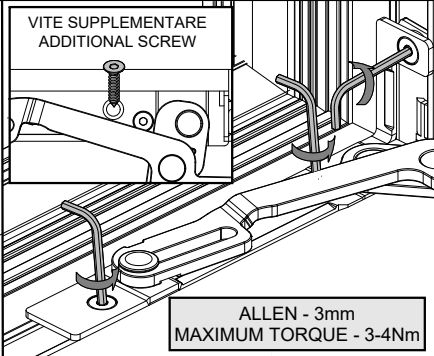


MONTAGGIO CERNIERA ANTA **HINGE SASH ASSEMBLY**

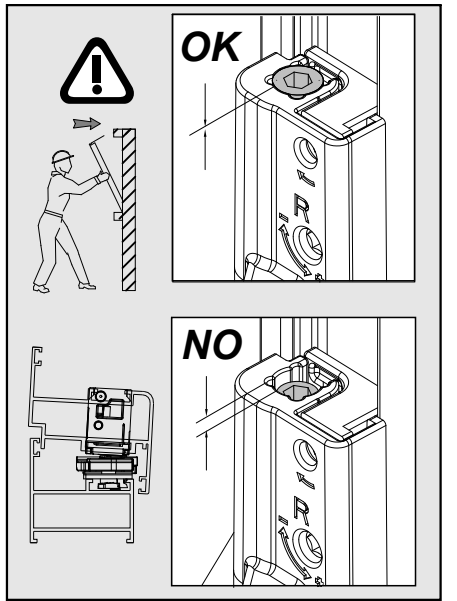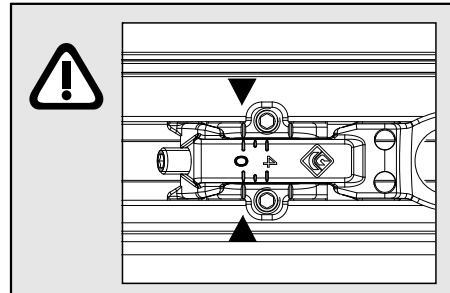

ANTA RIBALTA TILT AND TURN	
COD.	NODO
3520.30	A01 - A05
3400G.30	A03

MANOVRA LOGICA TILT BEFORE TURN	
COD.	NODO
3550L.30	A01 - A05
3400LG.30	A03


$1200\text{ mm} < L = 1700\text{ mm}$

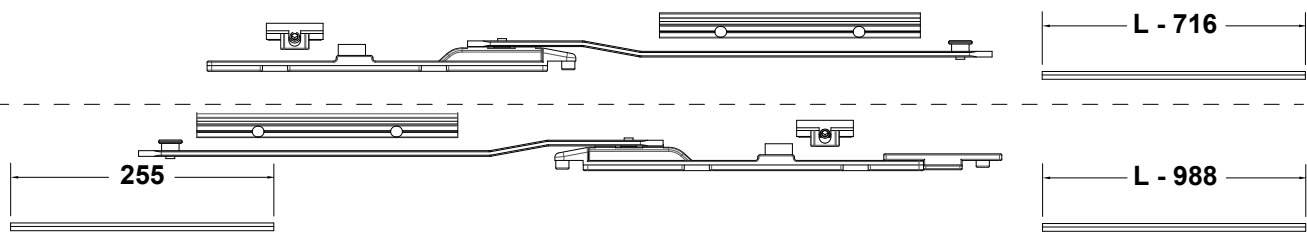

MANOVRA LOGICA TILT BEFORE TURN	
COD.	NODO
3304AL.21S/D	A01 - A05
3303AL.21S/D	A03

ANTA RIBALTA TILT AND TURN	
COD.	NODO
3304A.21S/D	A01 - A05
3303A.21S/D	A03

$670\text{ mm} < L = 1700\text{ mm}$

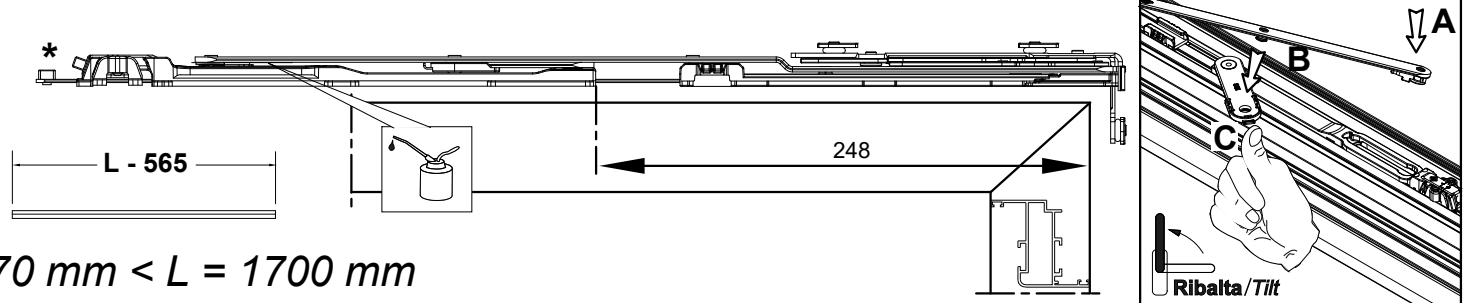

MANOVRA LOGICA TILT BEFORE TURN	
COD.	NODO
3304AL.20S/D	A01 - A05
3303AL.20S/D	A03

ANTA RIBALTA TILT AND TURN	
COD.	NODO
3304A.20S/D	A01 - A05
3303A.20S/D	A03

$470\text{ mm} < L = 670\text{ mm}$

